




Instructions for installing opt 1 or an opt 2 in an FS740

1. Remove the top cover (save all the screws).
2. Insert the connector on the opt 1 or opt 2 in the Clock connector on the FS740 main board.

Make certain that you have installed the connector correctly.

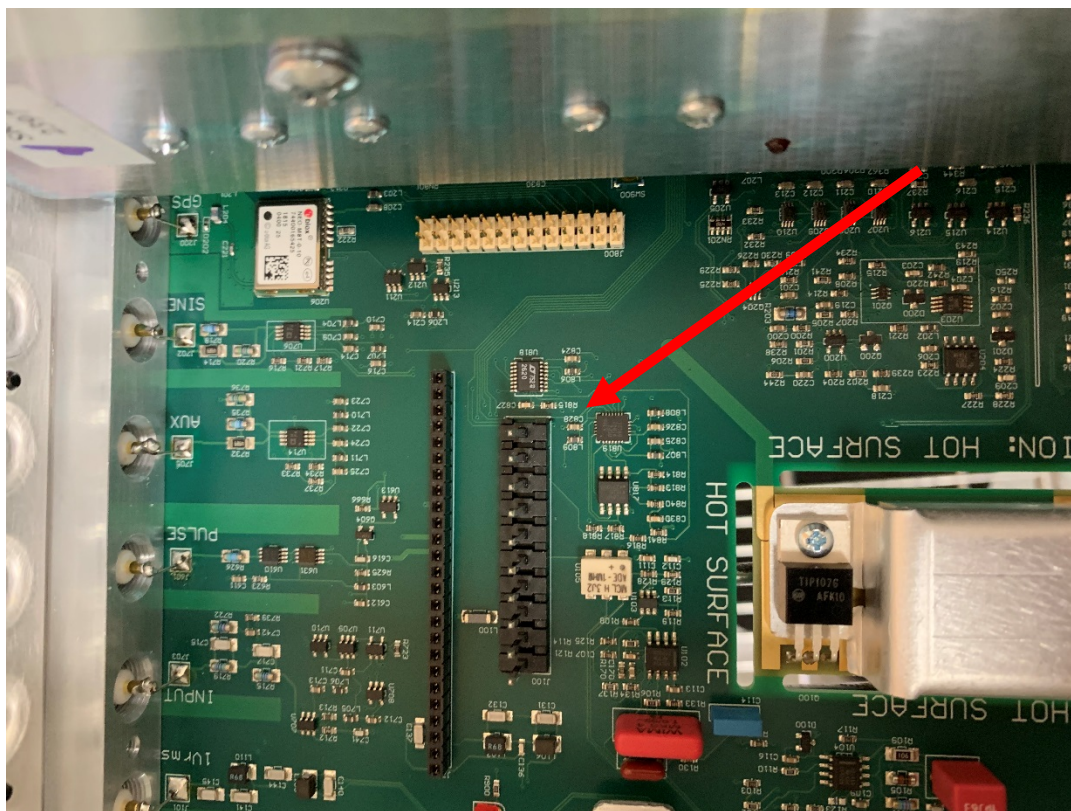

If the clock option chassis and the FS740 chassis do not line up flush (parallel), then you have installed the clock wrong (missed a pin), and you will need to remove the clock and then install it again.

4. Secure the clock with the two beveled screws provided.
5. Plug in the FS740
6. Press the "Config" button on the right of the instrument.
7. Press "Device Info" on the touch screen (bottom left).
8. Check the "Installed Timebase". It should read as OCXO or Rb.
9. Put the top cover back on and replace all the screws.